

Zero Leakage Kit is used to prevent loader beam from settling when tractor is not in operation.

Installation:

1. Remove WEO socket from port shown in fig. 1 below and replace with fitting 1120012. Use M10 hex key wrench for removing plug.

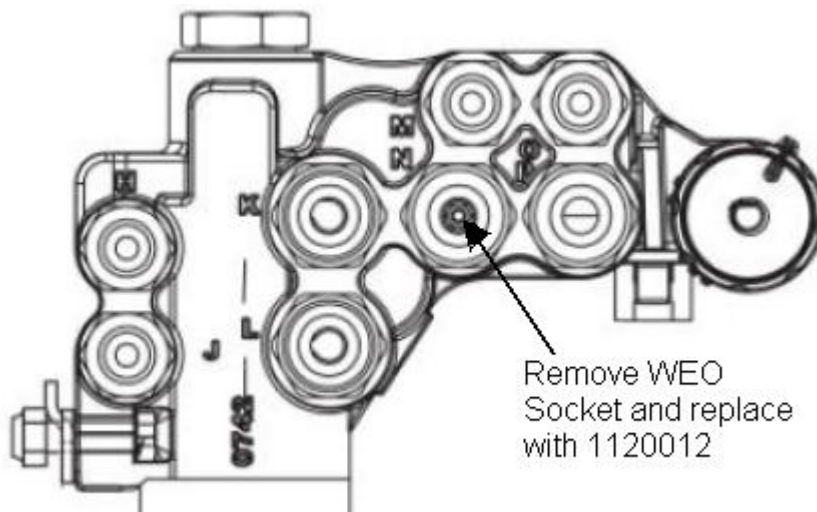


figure 1. Compact valve

2. Install WEO Socket in Shut Off Valve, shown in Figure 2 below.

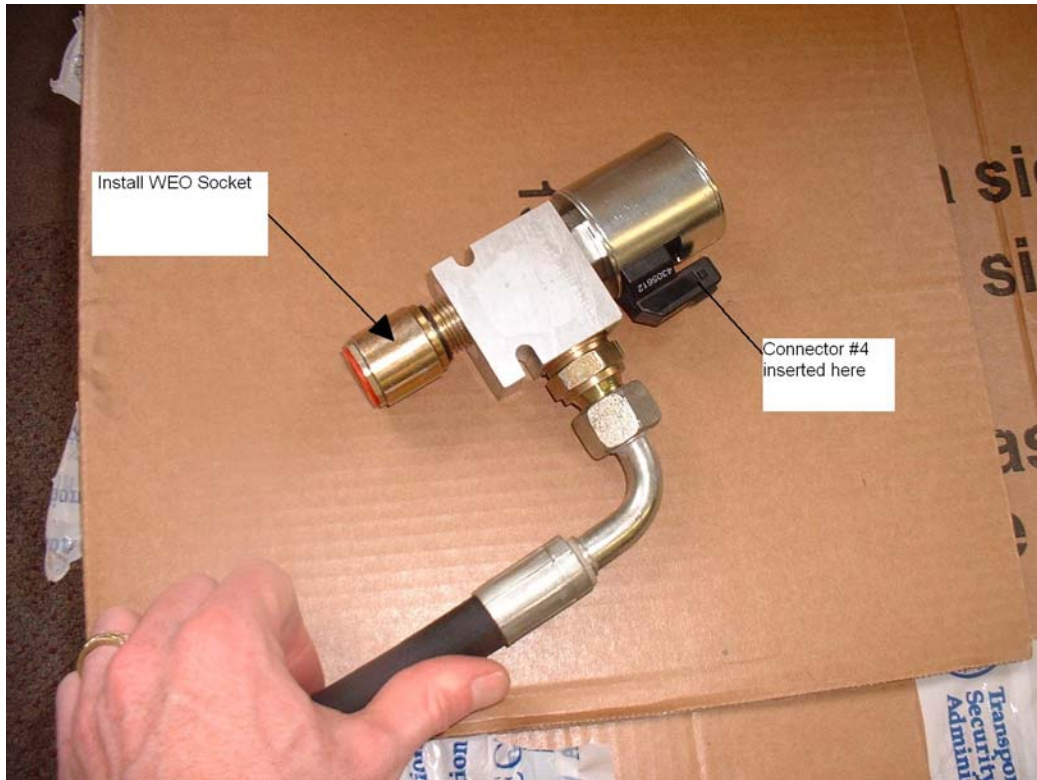


Figure 2. Shut Off Valve

3. Insert hose marked #2 into Shut Off Valve and route hose included in kit to port “N”, as shown in Figure 3.

Important: For proper engagement when inserting hose #2 into WEO socket, ensure that red retaining clip is in place.

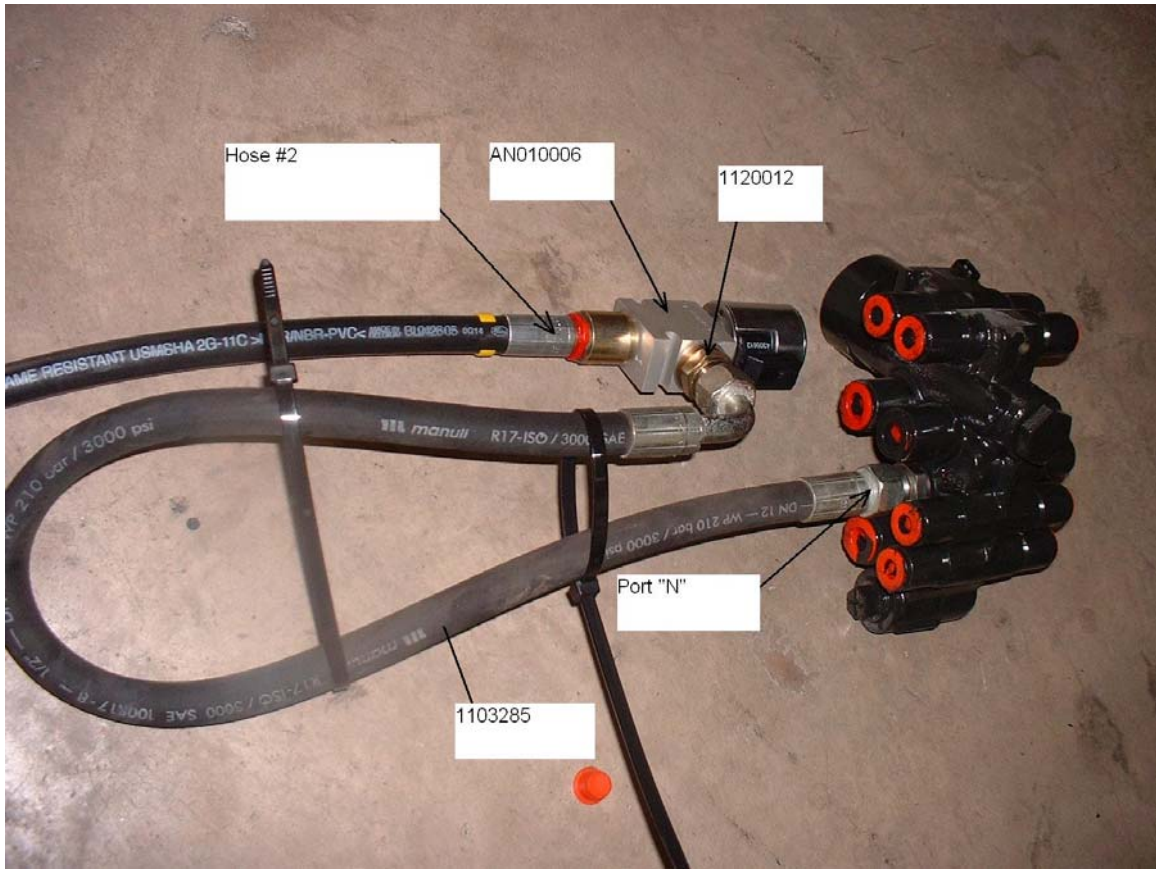


Figure 3. Assembly of Shut Off Valve

4. Wire implement plug as shown in figure 4 below. Disconnect Joystick Wire 3 from implement plug and connect terminal “2” to terminal “1” using a short jumper wire.

Important: Zero Leakage Kit uses connector #4, normally used for Selecto-4. Zero Leakage Kit is not compatible with Selecto-4.

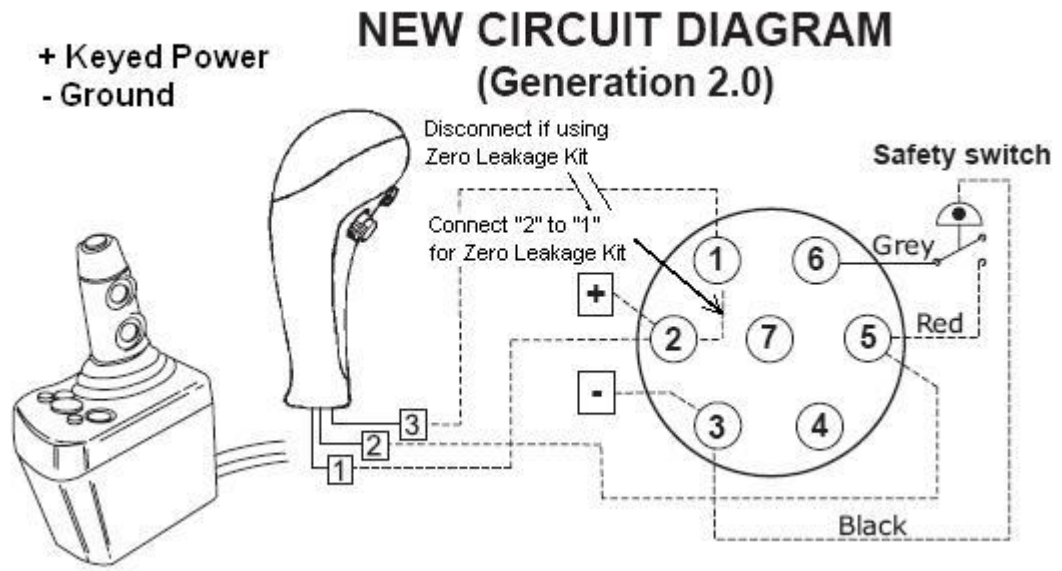


Figure 4 Wiring diagram for Zero Leakage Kit